

BA-DSH30

30" WEATHER SEALED DRY STORAGE PANTRY (ASSEMBLY REQUIRED)

PRODUCT OVERVIEW

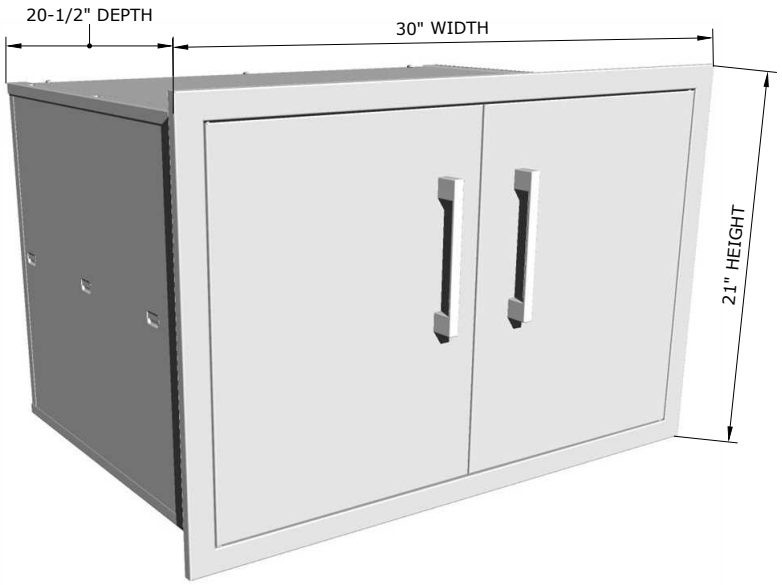

PRODUCT DETAILS

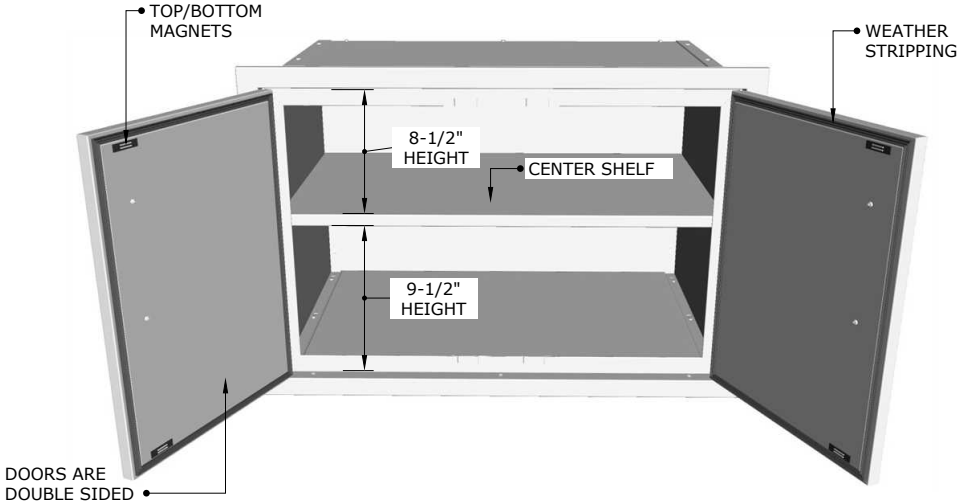


PRODUCT INSTALLATION

HEIGHT (H) WIDTH (W) DEPTH (D)


PRODUCT SIZE
30" W x 21" H x 20-5/8" D
CUT-OUT SIZE
28 1/4" W x 19 1/4 " H

Material Specifications:
16 gauge 304 Stainless Steel for Doors. 18 gauge 201 Stainless Steel for Box. Handles are made of zinc alloy, chrome plated

EXTERIOR PRODUCT SIZE

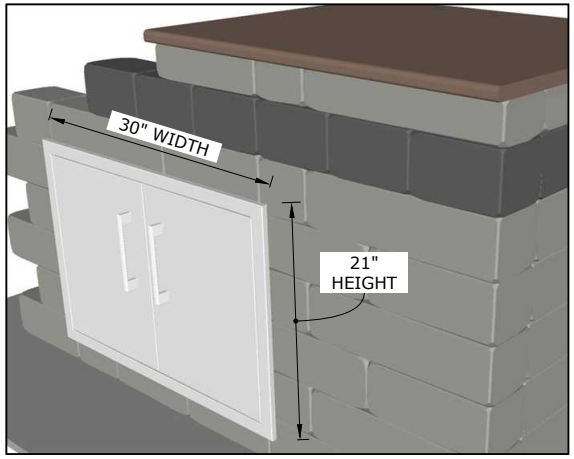

INTERIOR ISLAND CUT-OUT SIZE

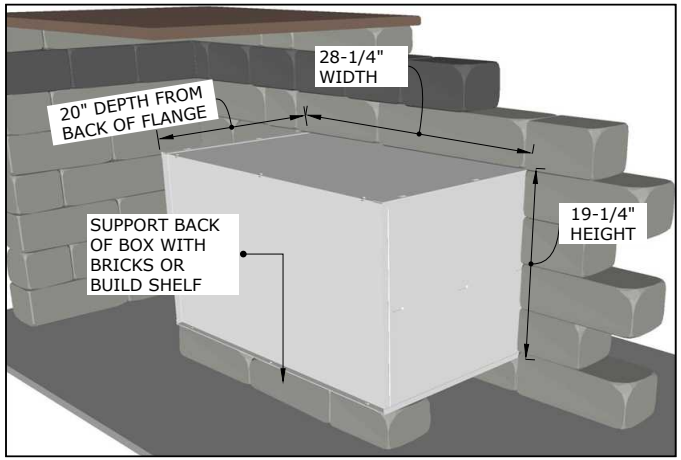

PRODUCT DETAILS

- Double doors, double sided
- Weather stripping; top and bottom magnets
- Center shelf: 8-1/2" upper and 9-1/2" lower openings
- Set box 20" deep from back of flange
- Support back of box with bricks or a shelf
- Assembly required: parts and setup on pages 2 and 3

MATERIAL SPECIFICATIONS


- 16 gauge 304 stainless steel for doors
- 18 gauge 201 stainless steel for box
- Handles are made of zinc alloy, chrome plated

WARRANTY


Exterior Finish	**3 Years**
Structure	**3 Years**
Handle	**1 Year**

BA-DSH30

30" WEATHER SEALED DRY STORAGE PANTRY (ASSEMBLY REQUIRED)

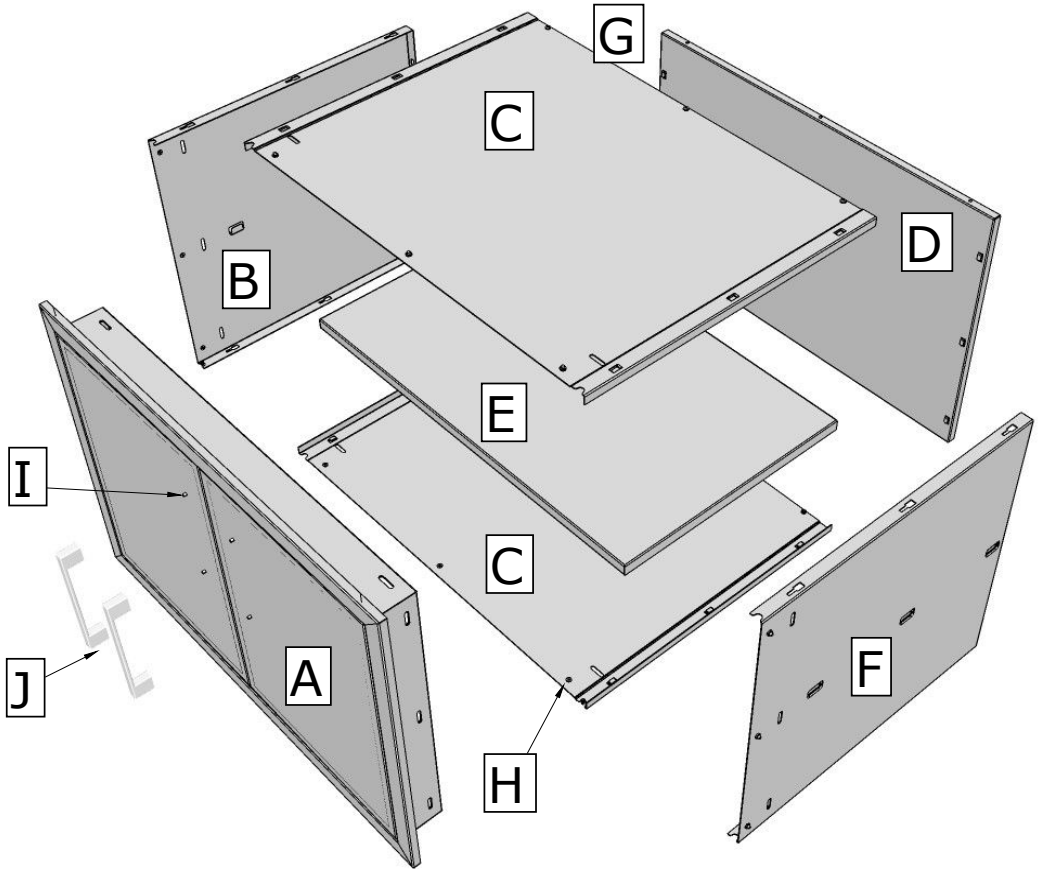


LABEL	ITEM NAME	QUANTITY
A	DOOR FRAME	1
B	LEFT SIDE PANEL	1
C	TOP & BOTTOM	2
D	BACK PANEL	1
E	CENTER SHELF	1
F	RIGHT SIDE PANEL	1
G	BUTTON HEAD SCREW	6
H	FLAT HEAD SCREW	12
I	BUTTON HEAD SCREW	4
J	HANDLES	2

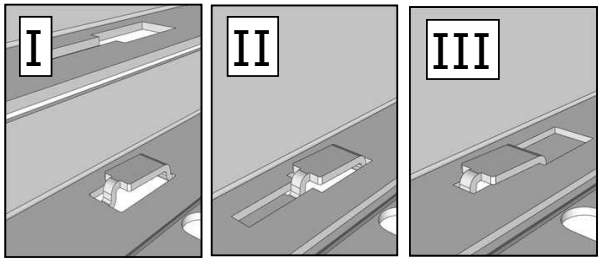


I. Align each panel hole to adjacent hinge

II. Place panels together align to each hinge


III. Slide adjacent panel over locking panels together

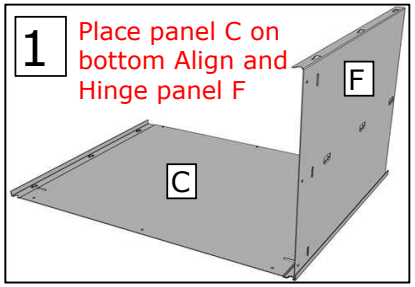


1 Place panel C on bottom Align and Hinge panel F

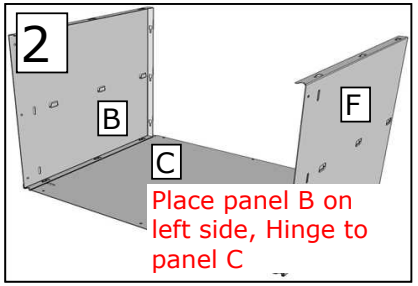


2 Place panel B on left side, Hinge to panel C

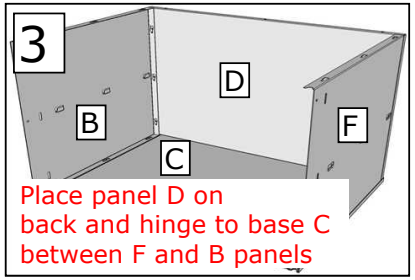

3 Place panel D on back and hinge to base C between F and B panels

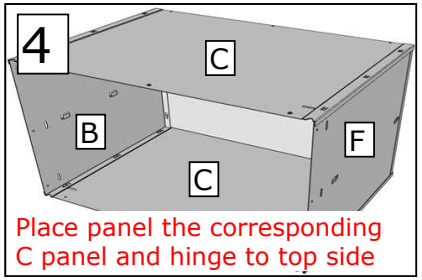

4 Place panel the corresponding C panel and hinge to top side

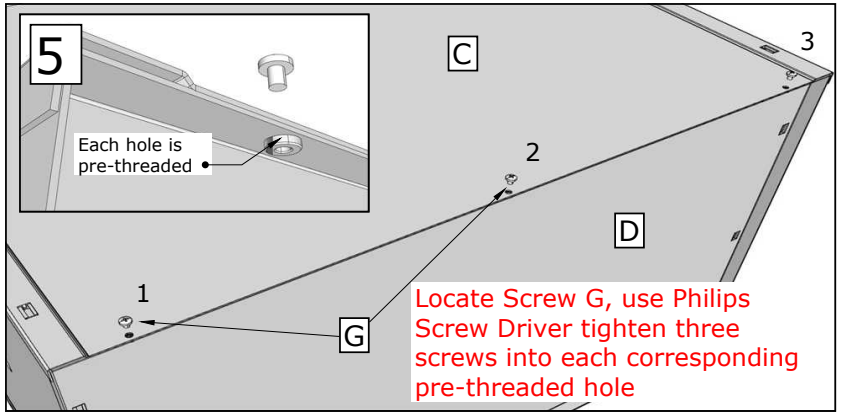


5 Locate Screw G, use Philips Screw Driver tighten three screws into each corresponding pre-threaded hole

BA-DSH30


30" WEATHER SEALED DRY STORAGE PANTRY (ASSEMBLY REQUIRED)

6

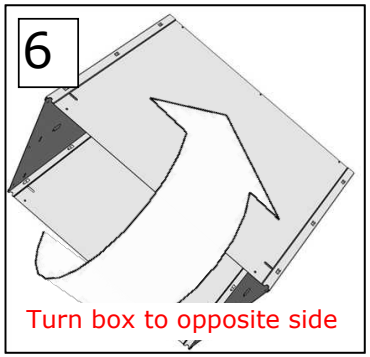


Turn box to opposite side


7 Locate Screw G, use Philips Screw Driver tighten three screws into each hole

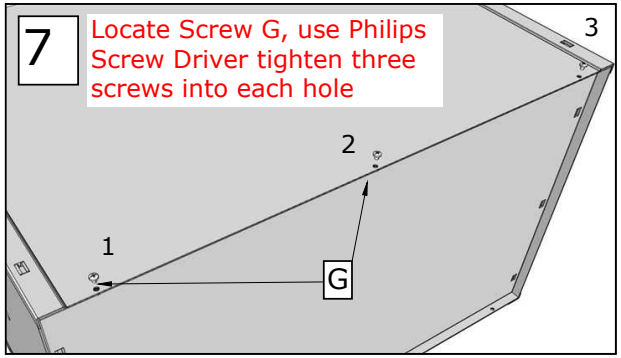

8 Slide Shelf into Box

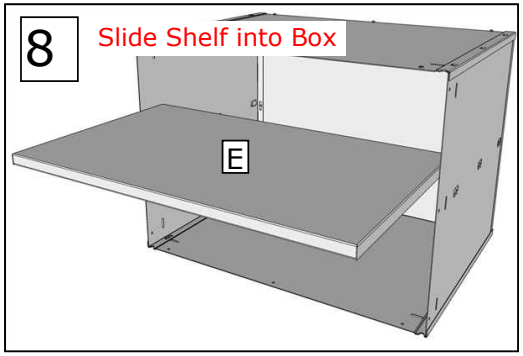


9

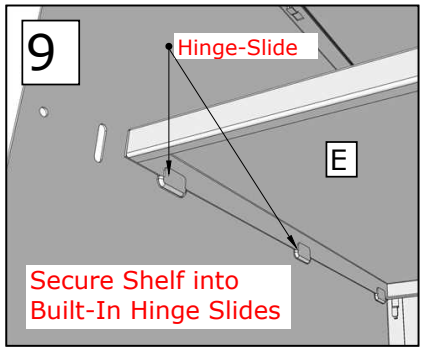


Secure Shelf into Built-In Hinge Slides

10

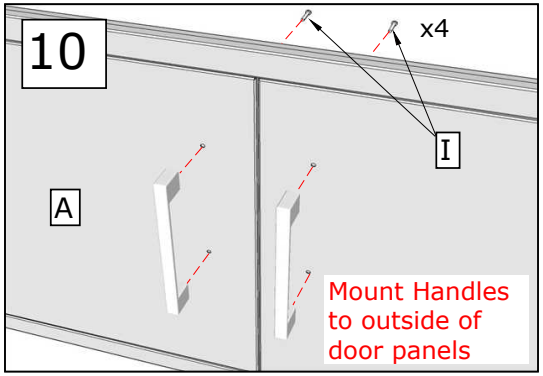


Mount Handles to outside of door panels

11 Insert Door into inside of open box end

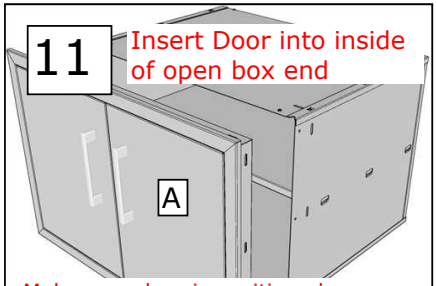


Make sure door is positioned so that handles are closest to top of door panel

12 Open both doors completly

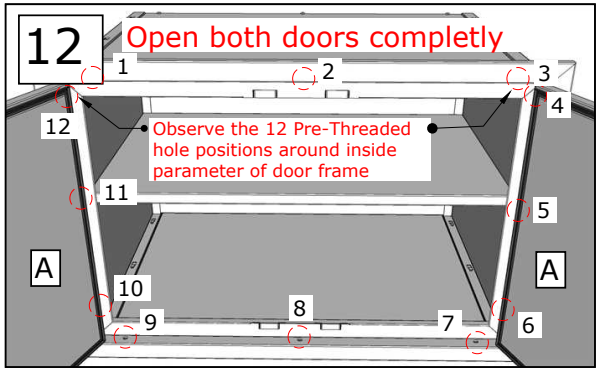



13

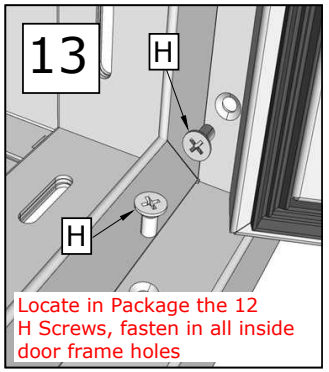

Locate in Package the 12 H Screws, fasten in all inside door frame holes

14

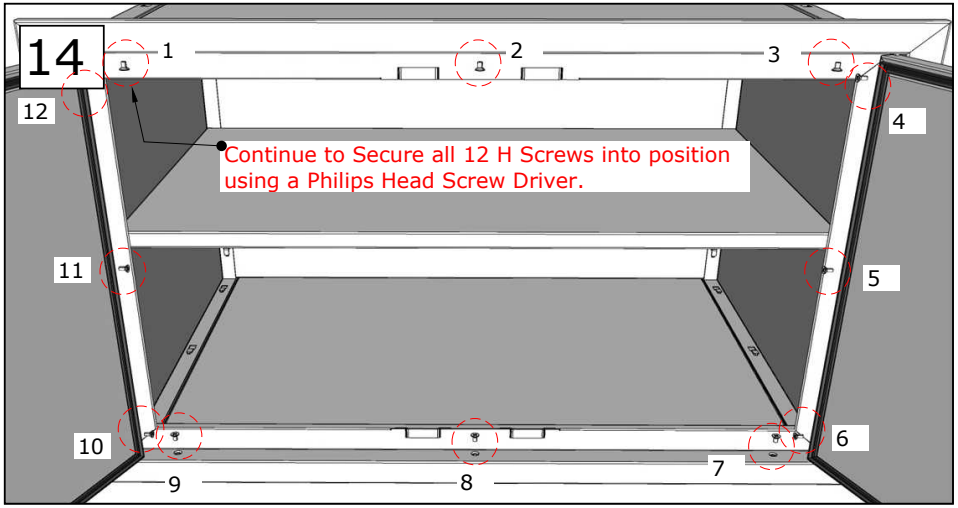

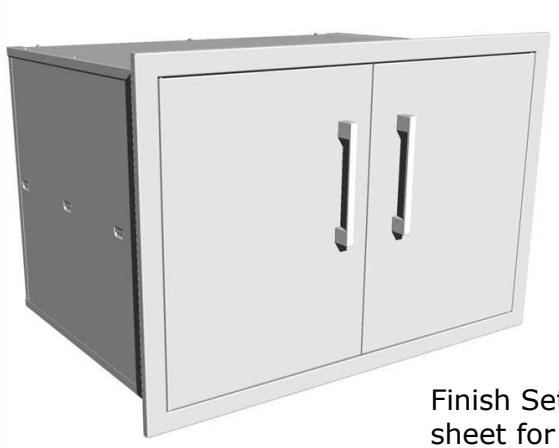

Finish Setup refer to Specification sheet for Cut-out Installation